



Claybrook.


DRAWER INSTALLATION GUIDE Avantech YOU

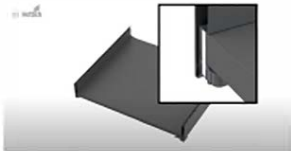

1° POSITION THE SIDES

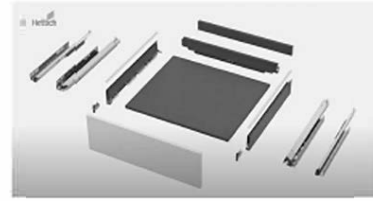

2° FIX THE SIDES

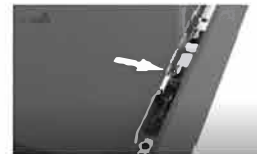

3° LOWER THE TAB FROM THE SIDE



4° WOODEN BACK PART



5° INSERT TABS AND INSERT SCREW



6° SCREW THE BACK



7° METALLIC BACK PART



8° INSERT TABS NOT SCREW



9° NOT SCREW THE SIDES SCREW THE CENTER



10° DOORS



11° PRESS TO ANCHOR THE DOOR



12° DISASSEMBLE DOOR BY UNSCREWING



13° PUSH TO ADJUST THE RUNNER



14° ADJUST THE DOOR'S HEIGHT



15° REGULATE THE DOOR'S INCLINATION



16° ADJUST THE LATERAL DISTANCE



17° SEPARATE THE DRAWER FROM THE RUNNERS

MORE DETAILED INFO:

